

## Mobile SaniStation Model 50 - Setup Instructions



**1) Unscrew L-bolt and washer from shaft**



**2) Insert shaft into base and attach using L-bolt and washer.**



**3) Attach T-bracket onto top of shaft. Hold aluminum part of bracket while tightening**



**4) Turn plastic fastener counter-clockwise to loosen extension. Extend top part of shaft. Turn fastener clockwise to tighten.**



**5) Insert brown, plastic key into holes on top of dispenser. Key can be found in small bag with wall-mounting screws(not used). Press key down to open dispenser.**



**6) Mount dispenser on T-bracket by lining up screws on T-bracket with holes on back of dispenser. Screws may need to be loosened slightly to allow dispenser to fit.**



**7) Using 2.5mm hex wrench (not included), tighten the screws so that dispenser is firmly attached to T-bracket.**




**8) Placing two fingers under plastic tab at bottom of dispenser, press upwards and release several times to ensure smooth movement.**



**9) Slide off plastic cover on side of dispenser and insert batteries. Slide cover back on once batteries have been inserted.**



**10) Remove black cap to fill container with sanitizer. Replace cap once done. Close dispenser.**

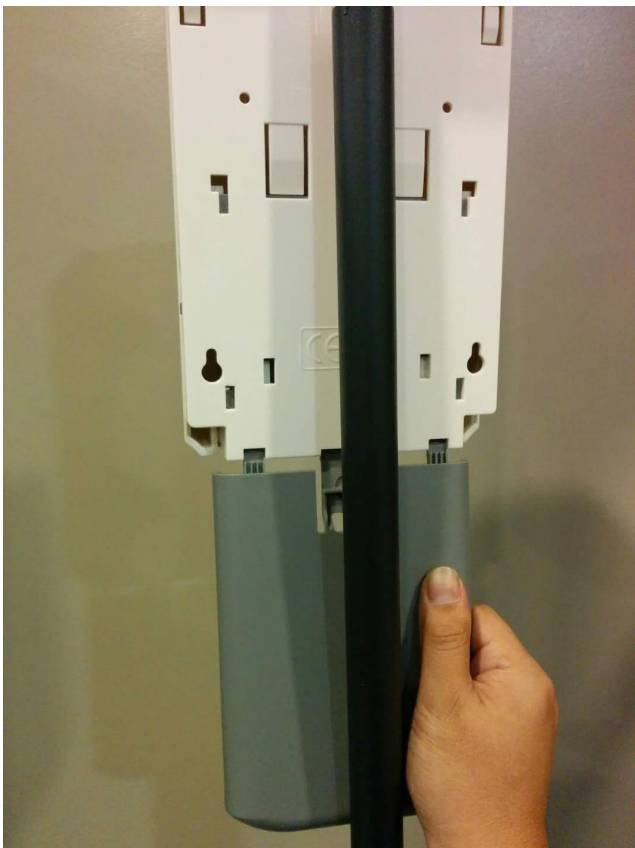

**11) With dispenser closed, attach drip tray to the bottom of dispenser. Insert protrusions on drip tray into matching slots on dispenser.**



**12) Using provided velcro strips, attach one side to drip tray and other side to the shaft. This is to prevent drip tray from detaching.**




**13) Attach display placard by inserting placard into groove on back of T-bracket. Line up hole in the placard with screw and tighten screw to hold placard in place.**



**14) Turn dispenser ON by pushing switch downwards. Turn dispenser OFF by pushing switch upwards.**



**15) With dispenser on, place hand under dispenser for sensor to activate dispenser.**

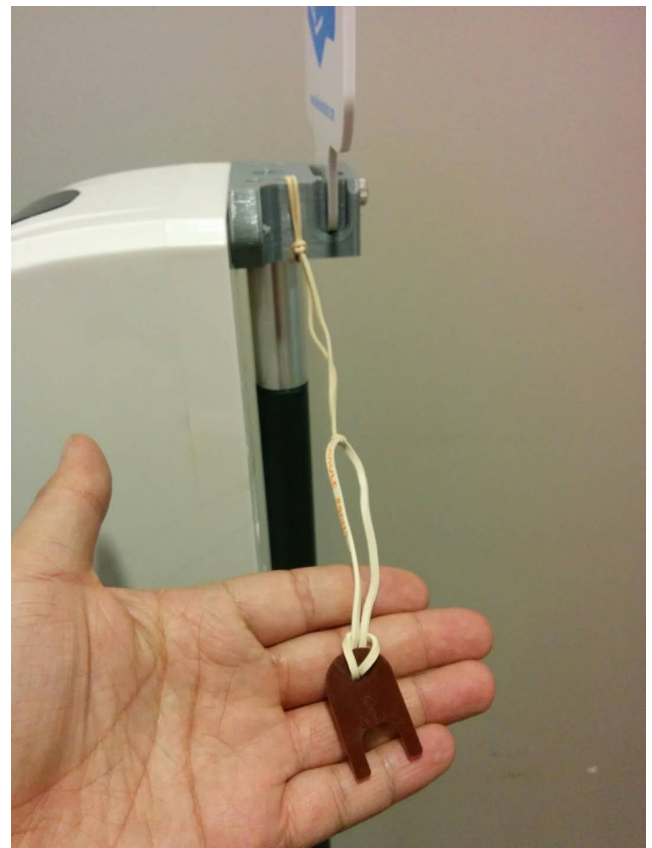

**16) (Optional) Attach key to dispenser to prevent it from getting lost.**